

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
ATOS F/LEFT	ENGINE L4-SOHC	UNLEAD GEN	√	√	√											
		UNLEAD EOBD	√	√												
		UNLEAD MEX	√	√												
		LEAD	√	√	√	√	√									
	A / T		√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG		√	√												
IMMOBILIZER			√													
ATOS APR-98	ENGINE L4-SOHC	UNLEAD GEN	√	√	√											
		UNLEAD EOBD	√	√												
		UNLEAD MEX	√	√												
		UNLEAD IMM	√	√	√											
		LEAD	√	√	√	√	√									
	A / T		√	√	√											
	SAT		√	√												
	ABS		√	√	√											
SRS-AIRBAG		√	√													
IMMOBILIZER			√													
GETZ	ENGINE(GASOLINE)	UNLEAD GEN	√	√												
		LEAD ALL	√	√			√									
		UNLEAD EOBD	√	√												
	ENGINE-DIESEL		√	√	√											
	A / T		√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG		√	√												
	IMMOBILIZER		√	√				√	√	√	√					
ELEC. STEERING		√	√													
ACCENT03-05	ENGINE(GASOLINE)	UNLEAD GEN	√	√												
		LEAD ALL	√	√			√									
		UNLEAD EOBD	√	√												
		ULLEAD 03MY OBD-II	√	√												
		ULLEAD 04MY OBD-II	√	√												
	ENGINE-DIESEL		√	√	√											
	A / T		√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG	SRE-LC/HMC	√	√									√			
		SRE-SMART(DUAL STAGE)	√										√			
IMMOBILIZER	GASOLINE		√					√	√	√	√					
	DIESEL		√					√	√	√	√					
ACCENT 00~02	ENGINE L4-SOHC	LEAD ALL	√	√			√									
		UNLEAD GEN	√	√												
		UNLEAD EOBD	√	√												
		UNLEAD OBD-II	√	√												
		LEAD ALL	√	√				√								

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
ACCENT 00~02	ENGINE L4-DOHC	UNLEAD GEN	√	√												
		UNLEAD EOBD	√	√												
		UNLEAD OBD-II	√	√												
	ENGINE-DIESEL		√	√	√											
	A / T		√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG		√									√				
	IMMOBILIZER	GASOLINE		√				√	√	√	√					
	DIESEL		√				√	√	√	√						
ACCENT	ENGINE L4-SOHC	UNLEAD 1.3 95-97MY GEN	√	√	√											
		UNLEAD 1.3 95-97MY IMM	√	√	√											
		UNLEAD 1.3L 98MY GEN	√	√	√											
		UNLEAD 1.3L 98MY IMM	√	√	√											
		UNLEAD 1.5L 95MY	√	√	√											
		UNLEAD 1.5L 96-98MY	√	√	√											
		UNLEAD 1.5L IMM	√	√	√											
		UNLEAD 1.5 95-97MY KOR	√	√	√											
		UNLEAD 1.5L 98MY KOR	√	√	√											
		LEAD 1.5L 95MY	√	√	√											
		LEAD 1.5L 96-98MY	√	√	√											
		UNLEAD 96-97MY OBD-II	√	√												
		UNLEAD 98-99MY OBD-II	√	√												
	ENGINE L4-DOHC	UNLEAD 1.5 95-97MY MAF	√	√	√											
		UNLEAD 1.5L 97MY IMM	√	√	√											
		UNLEAD 1.5 98-99MY IMM	√	√	√											
		UNLEAD 1.5 97-98MY MAP	√	√	√											
		UNLEAD 96-97MY OBD-II	√	√												
	A / T		√	√	√											
	ABS		√	√	√											
SRS-AIRBAG		√									√					
IMMOBILIZER		√	√				√		√			√	√	√		
EXCEL	ENGINE L4-SOHC		√	√												
	A / T		√	√	√											
SCOUPE	ENGINE L4-SOHC	UNLEAD 94-96MY GEN	√	√	√											
		UNLEAD 92-94MY ALL	√	√	√											
		UNLEAD 91-92MY ALL	√	√	√											
		UNLEAD 94-96MY FED	√	√	√											
		UNLEAD 94-96MY CAL	√	√	√											
		LEAD 93-96MY ALL	√	√	√											
	ENGINE L4-SOHC TURBO	UNLEAD 94-96MY ALL	√	√	√											
		UNLEAD 92-94MY ALL	√	√	√											
	UNLEAD 92MY KOR	√	√	√												
A / T		√	√	√												
MATRIX 02-07	ENGINE(GASOLINE)	LEAD 1.6L ALL	√	√	√		√									
		UNLEAD 1.6L GEN	√	√												
		UNLEAD 1.6L EOBD	√	√												
		LEAD 1.8L ALL	√	√	√	√	√									
		UNLEAD 1.8L GEN	√	√												
		UNLEAD 1.8L EOBD	√	√	√	√										
	ENGINE(DIESEL)	1.5 D-ENGINE	√	√	√											

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
MATRIX 02-07	ENGINE(DIESEL)	1.5 U-ENGINE VGT(EURO-3)	√	√	√											
		1.5 U-ENGINE VGT(EURO-4)	√	√	√											
	A / T		√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG		√									√				
	TRACTION		√	√	√											
	IMMOBILIZER	1.6L(GASOLINE)			√				√	√	√	√				
		1.8L(GASOLINE)			√				√	√	√	√				
DIESEL				√				√	√	√	√					
ELANTRA 04-05	ENGINE(GASOLINE)	LEAD 1.6L ALL	√	√			√									
		UNLEAD 1.6L GEN	√	√												
		UNLEAD 1.6L EOBD	√	√												
		LEAD 1.8/2.0L ALL	√	√	√	√	√									
		UNLEAD 1.8/2.0L GEN	√	√	√	√										
		UNLEAD 1.8/2.0L EOBD	√	√	√	√										
		UNLEAD 2.0L OBD-II	√	√	√	√	√	√								
	ENGINE(DIESEL)		√	√	√											
	A / T	1.6L		√	√	√										
		1.8/2.0L		√	√	√										
	ABS		√	√	√											
	SRS-AIRBAG		√									√				
	TRACTION		√	√	√											
IMMOBILIZER	1.6L(GASOLINE)			√				√	√	√	√					
	1.8/2.0L(GASOLINE)			√				√	√	√	√					
	DIESEL			√				√	√	√	√					
ELANTRA 01-03	ENGINE(GASOLINE)	LEAD 1.6L ALL	√	√			√									
		UNLEAD 1.6L GEN	√	√												
		UNLEAD 1.6L EOBD	√	√												
		LEAD 1.8/2.0L ALL	√	√	√	√	√									
		UNLEAD 1.8/2.0L GEN	√	√	√	√										
		UNLEAD 1.8/2.0L EOBD	√	√	√	√										
		UNLEAD 2.0L OBD-II	√	√	√	√	√	√								
	ENGINE(DIESEL)		√	√	√											
	A / T	1.6L		√	√	√										
		1.8/2.0L		√	√	√										
	ABS		√	√	√											
	SRS-AIRBAG		√									√				
	TRACTION		√	√	√											
IMMOBILIZER	1.6L(GASOLINE)			√				√	√	√	√					
	1.8/2.0L(GASOLINE)			√				√	√	√	√					
	DIESEL			√				√	√	√	√					
ELANTRA 96~00	ENGINE L4-SOHC	UNLEAD 1.5L GEN	√	√	√											
		UNLEAD 1.5L IMM	√	√	√											
		LEAD 1.5L ALL	√	√	√											
	ENGINE L4-DOHC	UNLEAD 1.5L 96MY KOR	√	√	√											
		UNLEAD 1.5 97-98MY KOR	√	√	√											
		UNLEAD 1.6/2.0L GEN	√	√	√											
		UNLEAD 1.6/2.0L IMM	√	√	√											
LEAD 1.6/2.0L ALL	√	√	√													

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
ELANTRA 96~00	ENGINE L4-DOHC	UNLEAD 96MY OBD-II	√	√												
		UNLEAD 97MY OBD-II	√	√												
		UNLEAD 98MY OBD-II	√	√												
		UNLEAD 99-00MY OBD-II	√	√												
	A / T	~99MY(A4BF1)	√	√	√											
		2000MY(A4BF2)	√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG		√									√				
IMMOBILIZER	GASOLINE	√	√				√		√				√	√	√	
	DIESEL	√	√				√		√				√	√	√	
ELANTRA 92~95	ENGINE L4-SOHC		√	√												
	ENGINE L4-DOHC		√	√	√											
	A / T		√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG		√									√				
HD COUPE	ENGINE	LEAD 1.6L ALL	√	√			√									
		UNLEAD 1.6L GEN	√	√												
		UNLEAD 1.6L EOBD	√	√												
		LEAD 2.0L ALL	√	√	√	√	√									
		UNLEAD 2.0L(-CVVT) GEN	√	√	√	√										
		UNLEAD 2.0L(+CVVT) GEN	√	√	√	√										
		UNLEAD 2.0L(-CVVT) EOBD	√	√	√	√										
		UNLEAD 2.0L(+CVVT) EOBD	√	√	√	√										
		UNLEAD 2.0L OBD-II	√	√	√	√	√									
		LEAD 2.7L ALL	√	√	√	√										
		UNLEAD 2.7L GEN	√	√	√	√										
	UNLEAD 2.7L EOBD	√	√	√	√											
	UNLEAD 2.7L OBD-II	√	√	√	√											
	A / T		√	√	√											
	ABS		√	√	√											
SRS-AIRBAG		√									√					
TRACTION		√	√	√												
IMMOBILIZER	UNLEAD 1.6/2.0L IMM		√				√	√	√	√						
	UNLEAD 2.7L IMM	√	√				√	√	√	√						
HD COUPE 97~01	HD COUPE	UNLEAD 1.6/2.0L IMM	√	√	√											
		LEAD 1.6/2.0L ALL	√	√	√											
		EOBD 2001MY	√	√												
		UNLEAD 97MY OBD-II	√	√												
		UNLEAD 98MY OBD-II	√	√												
		UNLEAD 99-00MY OBD-II	√	√												
	A / T	97-99MY	√	√	√											
		2000MY~	√	√	√											
ABS		√	√	√												

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
HD COUPE 97~01	SRS-AIRBAG	97-99MY	√									√				
		2000MY~	√									√				
	IMMOBILIZER		√					√		√			√	√	√	
SONATA 99-04	ENGINE L4-DOHC	UNLEAD GEN	√	√	√											
		UNLEAD IMM	√	√	√											
		LEAD ALL	√	√	√											
		UNLEAD EOBD	√	√	√											
		UNLEAD OBD-II	√	√	√											
		LPG ALL	√	√	√											
	ENGINE V6-DOHC	UNLEAD GEN	√	√	√	√										
		UNLEAD IMM	√	√	√	√										
		LEAD ALL	√	√	√	√										
		UNLEAD EOBD	√	√	√	√										
		UNLEAD(~02MY) OBD-II	√	√	√	√										
		UNLEAD(03MY~) OBD-II	√	√	√	√										
	A / T		√	√	√											
	ABS	CTC TYPE(99-02MY)	√	√	√											
		BOSCH TYPE(03MY~)	√	√	√											
	SRS-AIRBAG	1999-2001MY	√										√			
F/LIFT		√										√				
TRACTION		√	√	√												
IMMOBILIZER		√	√					√		√			√	√	√	
SONATA 94~98	ENGINE L4-SOHC	UNLEAD 1.8L ALL	√	√	√											
		UNLEAD 2.0L ALL	√	√	√											
		LEAD 1.8L ALL	√	√	√											
		LEAD 2.0L ALL	√	√	√											
		UNLEAD 97MY OBD-II	√	√	√											
		UNLEAD 98MY OBD-II	√	√	√											
	ENGINE L4-DOHC	UNLEAD 1.8L ALL	√	√	√											
		UNLEAD 2.0L ALL	√	√	√											
		LEAD 2.0L ALL	√	√	√											
		UNLEAD 97MY OBD-II	√	√	√											
	ENGINE V6-SOHC	UNLEAD 98MY OBD-II	√	√	√											
		UNLEAD 3.0L ALL	√	√	√											
		LEAD 3.0L ALL	√	√	√											
		UNLEAD 97MY OBD-II	√	√	√											
	UNLEAD 98MY OBD-II	√	√	√												
	A / T		√	√	√											
ABS		√	√	√												
SRS-AIRBAG		√									√					
IMMOBILIZER		√	√					√		√		√	√	√		
LEC.CONTROL SUSPENSION		√	√	√												
SONATA	ENGINE L4-SOHC		√	√	√											
	ENGINE L4-DOHC		√	√	√											
	ENGINE V6-SOHC		√	√	√											
	A / T		√	√	√											
	ABS		√	√	√											
XG 99-05	ENGINE V6-DOHC	LEAD ALL	√	√	√	√	√									
		LEAD(+ETS) ALL	√	√	√											
		UNLEAD GEN	√	√	√	√										
		UNLEAD(+ETS) GEN	√	√	√											
		UNLEAD IMM	√	√	√	√										

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
XG 99-05	ENGINE V6-DOHC	UNLEAD(+ETS) IMM	√	√	√											
		UNLEAD(+ETS) OBD-II	√	√	√											
	A / T	2.0/2.5L	√	√	√											
		3.0/3.5L	√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG	~2002MY	√										√			
		F/LIFT	√										√			
	TRACTION		√	√	√											
	LEC.CONTROL SUSPENSION			√	√	√										
IMMOBILIZER			√	√	√			√		√			√	√	√	
MARCIA	ENGINE L4-DOHC		√	√	√	√										
	ENGINE V6-DOHC		√	√	√	√										
	A / T		√	√	√	√										
	ABS		√	√	√	√										
	SRS-AIRBAG		√									√				
	TRACTION		√	√												
	ECS		√	√												
CENTENNIAL 00~07	ENGINE	UNLEAD 3.0L ALL	√	√	√											
		UNLEAD 3.0L(+ETS) ALL	√	√	√											
		UNLEAD 3.5L(+ETS) GEN	√	√	√											
		UNLEAD 3.5L(+ETS) EOBD	√	√	√											
		LEAD 3.5L(+ETS) ALL	√	√	√											
		UNLEAD 4.5L GDI ALL	√	√	√											
		UNLEAD 4.5(+ETS) OBD-II	√	√	√											
		UNLEAD 4.5L MPI GEN	√	√	√											
		UNLEAD 4.5L MPI EOBD	√	√	√											
		UNLEAD 4.5L MPI OBD-II	√	√	√											
	LEAD 4.5L MPI ALL	√	√	√												
	A / T	3.0/3.5L	√	√	√											
		4.5L	√	√	√											
	VDC	MELCO TYPE	√	√	√											
		CTC TYPE(2002,09~)	√	√	√											
	SRS-AIRBAG	~2001MY(SDM-GH)	√													
		2002MY~(SRE-SMART)	√										√			
	IMMOBILIZER		√	√					√		√			√	√	√
	ECS	ECS	√	√	√											
	ECS	ACTIVE ECS	√	√	√											
TRACTION	ITT TYPE	√	√	√												
	CTC TYPE(2002.09~)	√	√	√												
GRANDEUR 94~98	ENGINE L4-SOHC		√	√	√											
	ENGINE L4-DOHC		√	√	√											
	ENGINE V6-SOHC		√	√	√											
	ENGINE V6-DOHC		√	√	√											
	A / T		√	√	√											

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
GRANDEUR 94~98	ABS		√	√	√											
	SRS-AIRBAG		√									√				
	ECS		√	√	√											
	TRACTION		√	√												
	FULL AUTO AIR/CON		√	√	√											
GRANDEUR 89~93	ENGINE L4-SOHC		√	√	√											
	ENGINE V6-SOHC		√	√	√											
	AUTOMATIC TRANSXLE		√	√	√											
	ECS		√	√	√											
	CRUISE CONTROL		√													
H-100 94-01	ENGINE L4-SOHC	UNLEAD 94-96MY ALL	√	√	√											
		UNLEAD 97-2000MY ALL	√	√	√											
		LEAD 94-96MY ALL	√	√	√											
		LEAD 97-2000MY ALL	√	√	√											
		LEAD 97-98MY ALL	√	√	√											
		DIESEL	√	√	√											
A / T		√														
H-100 TRUCK 04-07	ENGINE		√	√	√											
	A / T		√	√	√											
	ABS		√	√	√											
H-100 TRUCK 97-03	ENGINE L4-SOHC	GASOLINE	√	√	√											
		DIESEL	√	√	√											
		FBM	√													
	A / T		√													
H-1 98-07	ENGINE-GASOLINE:02MY~	UNLEAD 2.4L GEN	√	√	√											
		UNLEAD 2.4L EOBD	√	√	√											
		LEAD 2.4L ALL	√	√	√											
	ENGINE-GASOLINE:~01MY		√	√	√											
	ENGINE-DIESEL	T/CHARGER(COVEC-F)	√	√	√											
		T/C INTERCOOLER(COVEC)	√	√	√											
		CRDI(A-ENG)	√	√	√											
	ENGINE-FBM		√													
	A / T		√	√	√											
	ABS	2WD	√	√	√											
		4WD	√	√	√											
	SRS-AIRBAG		√									√				
	IMMOBILIZER	GASOLINE(2002MY~)	√	√					√		√			√	√	√
		GGASOLINE(~2001MY)	√	√					√		√			√	√	√
		DIESEL(CRDI)		√					√	√	√	√				
DIESEL(DOVEC-F)		√	√					√		√			√	√	√	
DIESEL(DDS)		√	√					√		√			√	√	√	
FUEL FIRED HEATER		√	√	√												
H-1 TRUCK	ENGINE-DIESEL		√	√	√											
	A / T		√	√	√											

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
H-1 TRUCK	ABS		√	√	√											
	SRS-AIRBAG		√									√				
SANTAFE	ENG. 2.0/2.4L(GASOLINE)	LEAD ALL	√	√	√											
		UNLEAD GEN	√	√	√											
		UNLEAD 2.0L EOBD	√	√	√											
		UNLEAD 2.4L EOBD	√	√	√											
		UNLEAD OBD-II	√	√	√											
	ENGINE 2.7L(GASOLINE)	LEAD ALL	√	√	√	√	√	√								
		UNLEAD GEN	√	√	√	√	√									
		UNLEAD EOBD	√	√	√	√										
		UNLEAD(~02MY) OBD-II	√	√	√	√	√									
		UNLEAD(03MY~) OBD-II	√	√	√	√	√									
	ENGINE(DIESEL)	WITHOUT VGT	√	√	√											
		WHTH VGT	√	√	√											
	A / T		√	√	√											
	ABS	2WD	√	√	√											
		4WD	√	√	√											
	SRS-AIRBAG		√									√				
TRACTION		√	√	√												
IMMOBILIZER			√				√	√	√	√						
TRAJET XG 01-07	ENGINE 2.0L(GASOLINE)	LEAD ALL	√	√	√	√										
		UNLEAD GEN	√	√	√	√										
		UNLEAD EOBD	√	√	√	√										
	ENGINE 2.7L(GASOLINE)	LEAD ALL	√	√	√	√	√	√								
		UNLEAD GEN	√	√	√	√										
		UNLEAD EOBD	√	√	√	√										
	ENGINE(DIESEL)	WITHOUT VGT	√	√	√											
		WITH VGT	√	√	√											
	A / T		√	√	√											
	ABS		√	√	√											
SRS-AIRBAG		√									√					
IMMOBILIZER			√				√	√	√	√						
TAXI 94-01	ENGINE L4-SOHC FBM		√													
	A / T		√	√	√											
TERRACAN 01-07	ENGINE	2.5L DIESEL(TCI)	√	√	√											
		2.9L DIESEL(C/RAIL)	√	√	√											
		UNLEAD 3.5L GEN	√	√	√											
		UNLEAD 3.5L EOBD	√	√	√											
		UNLEAD 3.5L OBD-II	√	√	√											
		LEAD 3.5L ALL	√	√	√											
	A / T		√	√	√											
	ABS		√	√	√											
SRS-AIRBAG		√									√					

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset		
TERRACAN 01-07	IMMOBILIZER	2.5L DIESEL(TCI)	√	√				√		√			√	√	√		
		2.9L DIESEL(C/RAIL)		√				√	√		√						
		3.5L GASOLINE ALL	√	√				√		√				√	√	√	
GALLOPER-II	ENGINE V6-SOHC	UNLEAD 3.0L GEN	√	√	√												
		UNLEAD 3.0L IMM/ME	√	√	√												
		LEAD 3.0L GEN	√	√	√												
		LEAD 3.0L IMM	√														
		DIESEL(COVEC-F)	√	√	√												
	A / T		√														
	ABS	~2000MY	√	√	√												
		2001MY BOSCH	√	√	√												
	SRS-AIRBAG		√									√					
	IMMOBILIZER	UNLEAD 3.0L IMM/ME	√						√		√			√	√	√	
LEAD 3.0L IMM		√						√		√			√	√	√		
DIESEL(COVEC-F)		√						√		√			√	√	√		
DIESEL(DDS)		√						√		√			√	√	√		
SANTAMO	ENGINE L4-SOHC	UNLEAD 2.0L ALL	√	√	√												
		LEAD 2.0L ALL	√	√	√												
	ENGINE L4-DOHC	UNLEAD 2.0L ALL	√	√	√												
		LEAD 2.0L ALL	√	√	√												
	A / T		√	√	√												
	ABS		√	√	√												
SRS-AIRBAG		√									√						
IMMOBILIZER		√	√				√		√			√	√	√			
TUCSON 04-07	ENGINE(GASOLINE)	UNLEAD2.0L GEN	√	√	√												
		UNLEAD 2.0L EOBD	√	√	√	√											
		UNLEAD 2.0L OBD-II	√	√	√	√											
		LEAD 2.0L ALL	√	√	√	√											
		UNLEAD 2.7L GEN	√	√	√	√											
		UNLEAD 2.7L EOBD	√	√	√												
		UNLEAD 2.7L OBD-II	√	√	√												
	LEAD 2.7L ALL	√	√	√	√												
	ENGINE(DIESEL)		√	√	√												
	A/T	2.0DISEL/2.7L(MELCO TCM)	√	√	√												
		2.0L(SIEMENS PCM)	√	√	√												
	SRS-AIRBAG	GENERAL	√	√	√												
		NAS	√	√	√												
	4WD		√	√	√												
IMMOBILIZER	2.0L GASOLINE	√	√						√	√	√						
	2.7L GASOLINE	√	√						√	√	√						
	DIESEL	√	√						√	√	√						
AIR CONDITION		√	√														
SONATA 05-07	ENGINE(GASOLINE)	UNLEAD 2.0/2.4L - ETS GEN	√	√	√												
		UNLEAD 2.0/2.4L - ETS EOBD	√	√	√												
		LEAD 2.0/2.4L - ETS ALL	√	√	√												
		UNLEAD 2.0/2.4L + ETS GEN	√	√	√												
		UNLEAD 2.0/2.4L + ETS EOBD	√	√	√												
		LEAD 2.0L/2.4L + ETS ALL	√	√	√												
		UNLEAD 3.3L GEN	√	√	√												
		UNLEAD 3.3L EOBD	√	√	√												
	LEAD ALL	√	√	√													
ENGINE(DIESEL)		√	√	√													

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
SONATA 05-07	A / T	2.4	√	√	√											
		3.3	√	√	√											
		EURO-4 VGT(CAN)	√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG		√	√	√											
	ECS		√	√	√											
	EPS		√	√	√											
	A/C		√	√	√											
IMMOBILIZER		√	√					√	√	√						
ATOS F/LEFT 06-07	ENGINE L4-SOHC	UNLEAD GEN	√	√	√											
		UNLEAD EOBD	√	√												
		UNLEAD MEX	√	√												
		LEAD	√	√	√	√	√									
	A / T		√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG		√	√												
	IMMOBILIZER			√												
GRANDEUR TG	ENGINE(GASOLINE)	UNLEAD GEN	√	√	√											
		UNLEAD EOBD	√	√	√											
		LEAD(+ETS) ALL														
		UNLEAD OBD-II	√	√	√											
	ENGINE(DIESEL)		√	√	√											
	A / T	GASOLINE	√	√	√											
		DIESEL	√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG	GENERAL	√	√	√											
		NAS	√	√	√											
	IMMOBILIZER	GENERAL		√					√	√	√	√				
		NAS	√	√												
	EPS		√	√	√											
	FULL AUTO AIR/CON		√	√	√											
BODY CONTROL MODULE		√	√	√												
AHLS		√	√													
IMMOBILIZER		√	√					√	√	√						
ACCENT(MC) 06-07	ENGINE(GASOLINE)	UNLEAD 1.6(CVVT) GEN	√	√	√	√										
		UNLEAD 1.6(CVVT) EOBD	√	√	√	√										
		KEAD 1.6(CVVT) ALL	√	√	√	√										
		UNLEAD 1.4(DOHC) GEN	√	√	√	√										
		UNLEAD 1.4(DOHC) EOBD	√	√	√	√										
		LEAD 1.4(DOHC) ALL	√	√	√	√										
	ENGINE-DIESEL		√	√	√											
	A / T	GASOLINE	√	√	√	√										
		DIESEL	√	√	√	√										
	ABS		√	√	√											
	SRS-AIRBAG		√	√												
EPS		√	√	√												
FULL AUTO AIR/CON		√	√	√												
IMMOBILIZER		√	√				√	√	√	√						
SANTAFE(CM) 06-07	ENGINE(GASOLINE)	UNLEAD GEN	√	√	√											
		UNLEAD EOBD	√	√	√											

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
SANTAFE(CM) 06-07	ENGINE(GASOLINE)	LEAD ALL	√	√	√											
		UNLEAD OBD-II	√	√	√											
	ENGINE(DIESEL)	EURO-3 VGT(KWP)	√	√	√											
	ENGINE(DIESEL)	EURO-3 VGT -CPF(CAN)	√	√	√											
		EURO-3 VGT +CPF(CAN)	√	√	√											
	A / T	GASOLINE	√	√	√											
		EURO-3 VGT(KWP)	√	√	√											
		EURO-3 VGT(CAN)	√	√	√											
	ABS		√	√	√											
	SRS-AIRBAG	GENERAL	√													
		NAS	√													
	FULL AUTO AIR/CON	GENERAL	√	√	√											
NAS		√	√	√												
4WD CONTROL		√														
IMMOBILIZER		√	√						√	√	√					
ELANTRA 07-	ENGINE(GASOLINE)	UNLEAD 1.6L GEN	√	√	√	√										
		UNLEAD 1.6L EOBD	√	√	√	√										
		LEAD 1.6L ALL	√	√	√	√										
		UNLEAD 1.6L OBD-II	√	√	√	√										
		UNLEAD 2.0L GEN	√	√	√	√										
		UNLEAD 2.0L EOBD	√	√	√	√										
		UNLEAD 2.0L OBD-II	√	√	√	√										
	ENGINE(DIESEL)		√	√	√	√										
	A / T	GASOLINE	√	√	√	√										
		EURO-3 VGT(KWP)	√	√	√	√										
		EURO-3 VGT(CAN)	√	√	√	√										
	ABS		√	√	√											
	SRS-AIRBAG	ACU(GEN)	√													
		ACU(NAS)	√													
		WCS	√													
	FULL AUTO AIR/CON		√	√	√											
	BODY CONTROL MODULE	GENERAL	√	√	√											
		NAS	√	√	√											
IMMOBILIZER	GASOLINE	√	√						√	√	√					
	DIESEL	√	√						√	√	√					
H-1 07~	ENGINE(GASOLINE)	UNLEAD GEN CAN	√	√	√											
		UNLEAD EOBD CAN	√	√	√											
		LEAD ALL CAN	√	√	√											
	ENGINE(DIESEL)	CRDI(A-ENG) EURO-4 (-CPF)	√	√	√											
		CRDI(A-ENG) EURO-4 (+CPF)	√	√	√											
	AUTOMATIC TRANSAXLE	GASOLINE	√	√	√											
		CRDI(A-ENG) EURO-4	√	√	√											
ABS/ESP		√	√	√												
SRS-AIRBAG		√														
FULL AUTO AIR/CON.		√	√	√												

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
H-1 07~	BODY CONTROL MODULE			√	√											
	IMMOBILIZER	GASOLINE		√												
		T/CHARGER(COVEC-F)		√	√											
		CRDI(A-ENG) EURO-4			√											
	FUEL FIRED HEATER			√	√											
VERACRUZ	ENGINE(GASOLINE)	UNLEAD 3.8L GEN		√	√	√										
		UNLEAD 3.8L EOBD		√	√											
		UNLEAD 3.8L OBD II		√	√	√										
		LEAD 3.8L ALL		√	√											
	ENGINE(DIESEL)			√	√	√										
	AUTOMATIC TRANSAXLE			√	√	√										
	ABS/ESP			√		√										
	FULL AUTO AIR/CON.			√	√	√										
	SRS-AIRBAG			√												
	4WD CONTROL			√	√	√										
	POWER TAIL GATE			√	√											
	BODY CONTROL MODULE	BODY CONTROL MODULE		√	√	√										
		DRIVER DOOR MODULE(DDM)		√	√	√										
		ASSIST DOOR MODULE(ADM)		√	√	√										
		IMS		√	√	√										
	IMMOBILIZER	TILT & TELESCOPE(TILT)		√	√	√										
GASOLINE				√												
	DIESEL			√												
SMART KEY SYSTEM	SMART KEY UNIT			√	√											
I30	ENGINE(GASOLINE)	UNLEAD 1.6L GEN		√	√	√										
		UNLEAD 1.4/1.6L EOBD		√	√	√										
		LEAD 1.6L ALL		√	√	√										
		UNLEAD 1.6L OBD-II		√	√	√										
		UNLEAD 2.0L GEN		√	√	√										
		UNLEAD 2.0L EOBD		√	√	√										
		LEAD 2.0L ALL		√	√	√										
		UNLEAD 2.0L OBD-II		√	√	√										
	ENGINE(DIESEL)	1.6 U-ENGINE WITHOUT CPF		√	√	√										
		1.6 U-ENGINE WITH CPF		√	√	√										
		2.0L D-ENGINE		√	√	√										
	AUTOMATIC TRANSAXLE	1.4/1.6L		√	√	√										
		2.0L		√	√	√										
	ABS/ESP			√	√	√										
	SRS-AIRBAG	ACU(GEN)		√												
		ACU(NAS)		√												
		WCS		√												
	TPMS			√	√	√										
	FULL AUTO AIR/CON.	GENERAL		√	√	√										
		EOBD		√	√	√										
ELEC.POWER STEERING			√	√												
BODY CONTROL MODULE	GENERAL				√											
	NAS				√											
IMMOBILIZER	GASOLINE			√												
	DIESEL			√												
ENGINE(GASOLINE)	UNLEAD GEN		√	√	√											
	LEAD ALL		√	√	√											
	UNLEAD EOBD		√	√	√											
ENGINE(DIESEL)		√	√	√												
AUTOMATIC TRANSAXLE		√	√	√												

MODEL	SYSTEM	Sub System / Model Year	DTC	Live Data	Actuation Test	RESET Adaptation	IDLE CO Adjust	PW Recode	Teach Mode	Neutral Mode	Limp home mode	Crash Info	Master key Recode	Master key Delete	IMM. Reset	
I10	ABS/ESP		√	√	√											
	SRS-AIRBAG		√													
	ELEC.POWER STEERING		√	√												
	IMMOBILIZER	GASOLINE			√											
		DIESEL			√											